



For Hire

To select "FOR HIRE" (vacant) mode, push button (A) (the "RATE" button) while the meter is in the "OFF" mode, displaying the clock or a blank screen. This selects "FOR HIRE" on tariff 1. If your meter is programmed for multi tariff then each subsequent push increments the rate. Otherwise the second push will select "OFF"

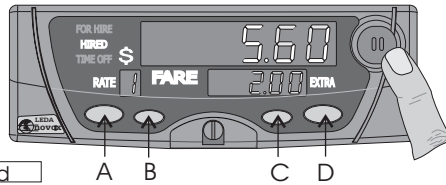


HIRED

To start a Fare, push the "OPERATE" button. This selects the "HIRED" mode. The Flag Fall shows. Button (D) applies one extra increment per push. Button (C) can be used to select multiple extra increments. Nine such "speed extras" memories can be sequentially displayed, (for such charges as Bridge or Road Tolls etc). Button (D) then applies the selected charge; adding it to the accrued extras. Push and hold button (C) to clear all extras..

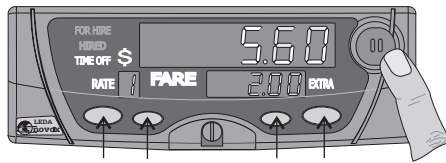


Time Off

To stop the Fare, push the "OPERATE" button once again. This selects the "TIME OFF" mode. For temporary summing of the extras to the fare, hit button (D) (This total times out after 5 seconds or so). To restart the fare, hit button (A) (if regulations allow). To clear the fare and return to the FOR HIRE mode, hit the "OPERATE" button again.

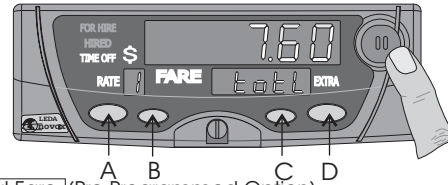

Total Fare (Pre Programmed Option)

This option becomes a fourth stage in the "OPERATE" button sequence. It adds the extras to the fare to display "Total Fare". There is no means of restarting the same fare from this stage. This screen will automatically clear after traveling for 50 metres, returning the meter to For Hire. If a Receipt Printer is fitted, press button (C) to print a receipt. (Automatic function for payment card fares). If a Swipe Reader is fitted, it is enabled to read cards in this mode.

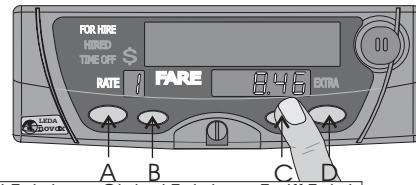

Shift Totals -> Global Totals -> Tariff Totals

Selected by hitting button (C) in the "FOR HIRE" mode. Running totals are displayed as; "Shift Total", "Global Total" and "Tariff Totals" The Shift totals can be cleared by hitting button(B) whilst displaying.(Optional) The meter automatically sequences through the running totals or you can step to the next total by pressing button (C). If a Receipt Printer is attached, then a Totals summary will be printed. To print tariff details, hit button (A) whilst displaying totals.

The Running Totals Sequence is as follows:

- SHIFT TOTALS-> Dollars, Extras, Trips, Hired Distance, Total distance
- GLOBAL TOTALS-> Trips, Units, Hired Distance, Time, Extras, Dollars, Distance, GST.
- TARIFF TOTALS-> Trips, Dollars, Distance, Time

Shift Totals



Total Fare dollars and cents accumulated for Shift



Total Extras (Dollars and cents).

Shift Totals



Number of Trips commenced for Shift



Hired Distance(km/Miles) accumulated for Shift



Total Distance accumulated during Shift

Global Totals



Total Dollars(Pounds) accumulated by the meter.



Total number of trips accumulated by the meter



Accumulative Number of monetary increments (drops).



Accumulative Total Hired distance travelled in any Tariff or Shift



Total Time (Hours) accumulated by the meter



Total Extras (Dollars and cents).



Accumulative Total distance travelled in all modes.



Total GST on Fares accumulated by the meter. (Applicable where metered fare excludes GST)

Tariff Totals (Repeated for each Tariff)



Total Fare dollars accumulated for Shift



Accumulative Number of Trips in any Tariff or Shift




Number of km./Miles travelled whilst Hired for Tariff



Number of hours and minutes Hired for Tariff

Adjustments

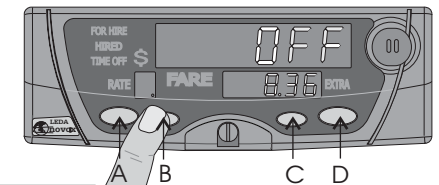

Clock Adjust

The meters clock time can have minor adjustments of + or- one minute per day. This is done in the "OFF" mode by pressing button (B) "- 1 minute" or pressing button (C) "+1 Minute".

Display Dim

To DIM the display, press button (B) whilst "FOR HIRE" or "HIRED". Repeat the process to return the display to its original brightness.